


FLUKE®

321 and 322 Clamp Meter Instruction Card


⚠ Warning

- Read the 321, 322 Clamp Meter Safety Sheet before using this meter.
- Lisez la fiche de sécurité 321, 322 Clamp Meter Safety Sheet avant d'utiliser cet appareil.
- Prima di usare questo strumento, leggere il documento 321, 322 Clamp Meter Safety Sheet.
- Vor der Verwendung des Meßgeräts die Sicherheitsinformationen zum 321, 322, Clamp Meter lesen
- Lea la hoja de instrucciones de seguridad "321, 322 Clamp Meter Safety Sheet" antes de utilizar este medidor.
- Leia "321, 322 Clamp Meter Safety Sheet" antesde usar este medidor.
- Lees het 321, 322 Clamp Meter Safety Sheet voordat u deze meter gebruikt
- Les 321, 322 Clamp Meter Safety Sheet før måleinstrumentet tas i bruk.
- Man skal læse "321, 322 Clamp Meter Safety Sheet" inden man tager instrumentet i brug.
- Lue 321, 322 Clamp Meter Safety Sheet ennen tämän laitteen käyttöä.
- Läs säkerhetsdatabladet "321, 322 Clamp Meter Safety Sheet" innan du använder detta instrument.
- 本器を使用する前に、321, 322 Clamp Meter Safety Sheet (321, 322 クランプ・メーターの安全シート)をお読みください。
- 이 계기를 사용하기 전에 321, 322 Clamp Meter Safety Sheet 를 읽으십시오.
- 使用本儀表前請先閱讀 321, 322 Clamp Meter Safety Sheet。
- 使用本仪表前请先阅读 321, 322 Clamp Meter Safety Sheet
- โปรดอ่านแผ่นข้อมูลเพื่อความปลอดภัย 321, 322 Clamp Meter Safety Sheet ก่อนที่ท่านจะใช้มิเตอร์นี้

On/Off


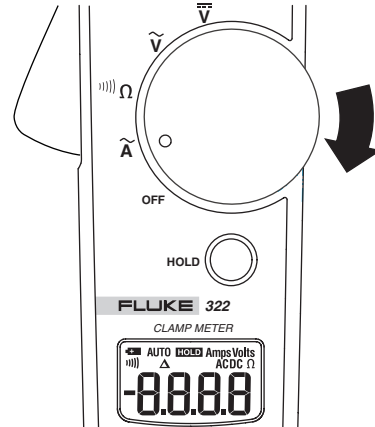


Automatic Off

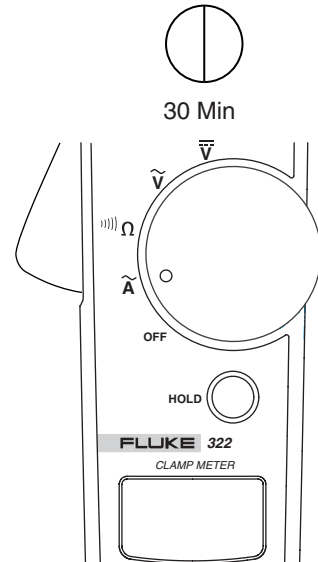

~A

Fluke 321 0 - 400.0 A
Fluke 322 0 - 40.00 A, 40.0 - 400.0 A

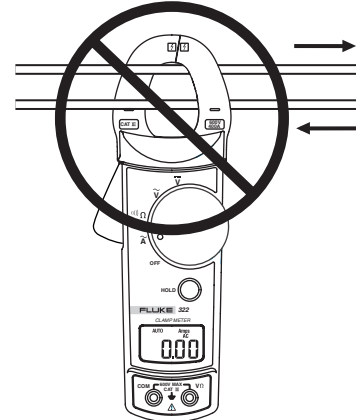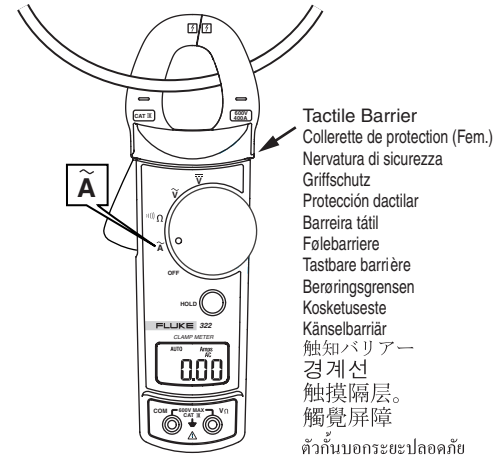

Currents Cancel

Les courants s'annulent, Le correnti si cancellano,
Ströme abbrechen, Se cancelan las corrientes,
Cancelamento de correntes, Stromen compenseren
elkaar, Strømutjevning, Strømstyrkeannullering
Strømstyrker udbalancerer, Virta pois, Avbryt ström
電流のキャンセル, 전류 상쇄, 電流互相取消,
電流互相取消, ยกเลิกกระแสไฟ

Specification:

* @ 23 °C ± 5 °C, 0 - 90%		321	322
$\tilde{A}$	Range	0 - 400.0 A	0 - 40.00 A 40.0 - 400.0 A
	Accuracy	0 - 60 Hz 1.8% ± 5 counts 0 Hz - 400 Hz 3.0% ± 5 counts	
	AC Respo	Avg	
$\tilde{V}$	Range	0 - 400.0, 400 - 600 V	
	Accuracy	50 - 400 Hz 1.2% ± 5 counts	
$\overline{V}$	Range	-	0 - 400.0, 400 - 600 V
	Accuracy	1% ± 5 counts	
Ω	Range	0 - 400.0 Ω	
	Accuracy	1.0% ± 5 counts	
Continuity	⏏	≤ 30 Ω	
Jaw Opening		inch or 26 mm	
IP Rating		40	
Storage Temperature		-30 °C to 60 °C	
Operating Temperature		-10 °C to 50 °C	
Altitude		2000 m	
EMC - EN61326			
CAT III 600V, pollution de			
CAT III equipment is des		protect against transients in	
equipment in fixed - equ		installations, such as distribution	
panels, feeders and shor		circuits, and lighting systems	
in large buildings.			
* < 18 °C, > 28 °C add 0.1		ified accuracy)/ °C.	



products online at: www.MyFlukeStore.ca 1.800.561.8187

Shop for Fluke products online at: www.MyFlukeStore.ca 1.800.561.8187



protect against transients in
installations, such as distribution
circuits, and lighting systems

ified accuracy)/ °C.


Continuity

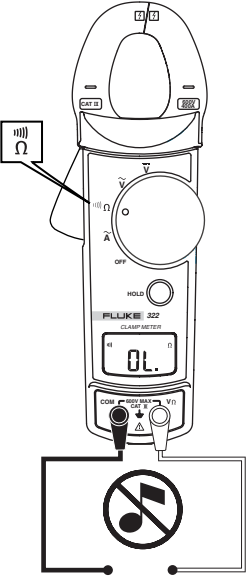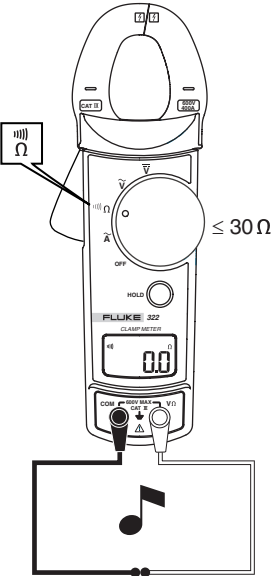


Hold

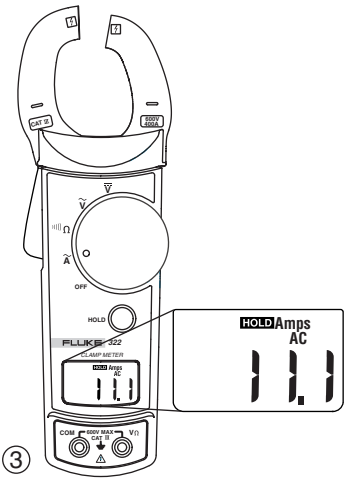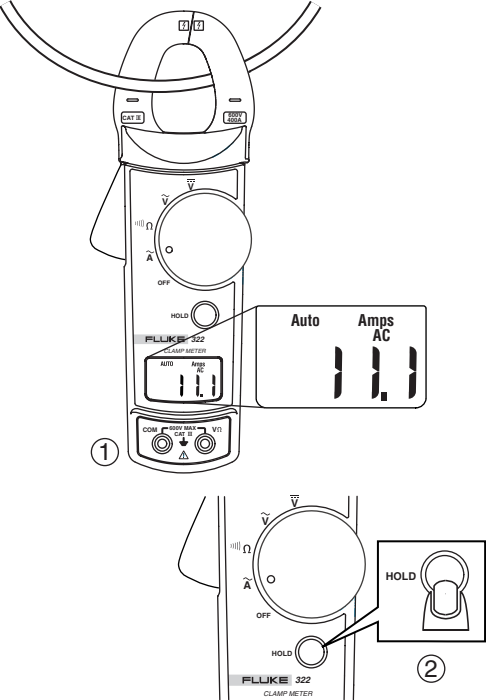

Battery Replacement

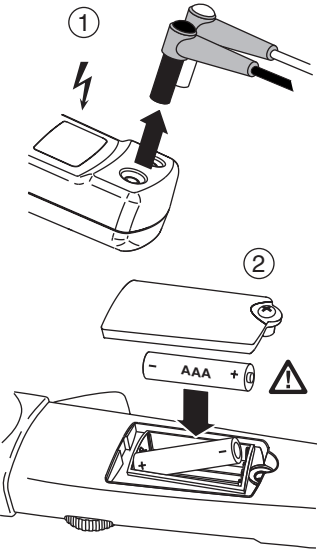

V, Ω
0 - 600 V dc 322
0 - 600 V ac
0 - 400.0 Ω

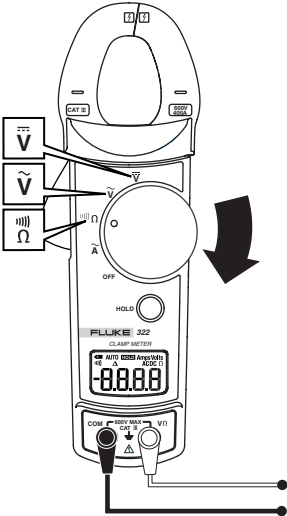

Cleaning

- Wipe the case with detergent. Do not use abrasives or solvents.
- Nettoyage : essuyez avec un chiffon humide et d'un détergent non abrasif. Ne pas utiliser d'abrasifs ou de solvants.
- Pulizia : pulire l'involucro con un panno umido e un detergente neutro. Non usare abrasivi né solventi.
- Limpieza: Limpie la carcasa con un paño húmedo y un detergente suave. No use abrasivos ni solventes.
- Reinigung: Das Gehäuse mit einem feuchten Lappen und milden Reinigungsmittel abwischen. Keine Scheuer- oder Lösungsmittel verwenden.
- Limpeza: Para limpar o aparelho com detergente abrasivos nem solventes.
- Reinigen: Veeg de behuizing af met een vochtige doek en niet-agressieve reinigingsmiddelen of schuurmiddelen of.
- Rengjöring: Tørk av maskinen med en mildt vaskemiddel. Ikke bruk skure- eller løsemidler.
- Rengöring: Tørk instrumentet med en fuktig klud og mildt skure- og oppløsningsmiddel.
- Puhdistaminen: Pyyhi laite kostealla kankaalla ja älä käytä pesuaineita tai liuottimia.
- Rengöring: Torka av instrumentet med en fuktad trasa och använd inte nötande skure- eller lösningsmedel.
- 清洁: 请用微湿的布擦拭盒子。请勿使用腐蚀性溶剂。
- 清潔: 使用微濕的布擦拭盒子。不可使用具腐蚀性或溶劑。
- クリーニング: クリーニングは、水で軽く湿らせた布と弱中性洗剤を使用してください。研磨剤や溶剤は使用しないでください。
- 정소: 케이스는 젖은 천으로 닦으십시오. 용제나 연마제는 사용하지 마십시오.
- การทำความสะอาด: เช็ดทำความสะอาดกล่องหรือหน้าจอด้วยความสะอาด อย่าขัดด้วยความแรง

Shop for Fluke products online at: www.MyFlukeStore.ca 1.800.561.8187